

ASSEMBLY REMOTE SPACER



Avoid collision!



With some brakes, the clamp of the brakes can collide with the underside of the Remote Basic, if the brake is to be applied more steeply. To avoid this, we have created a spacer that increases the distance and allows space for individual brake adjustment:

Mounting kit art. no.: 501052 – Remote spacer 4mm incl. screws



ASSEMBLY INSTRUCTIONS

① Open remote and remove screws (T10).



② Remove remote from its holder.



③ Insert remote spacer.



④ Put remote back on.



⑤ Screw remote back onto its holder (0.5Nm) using the new screws (M3x10).

